


INSTALLATION INSTRUCTIONS

Oceanus

100001/100002/100003/100004/
100149/100150/100151/100152

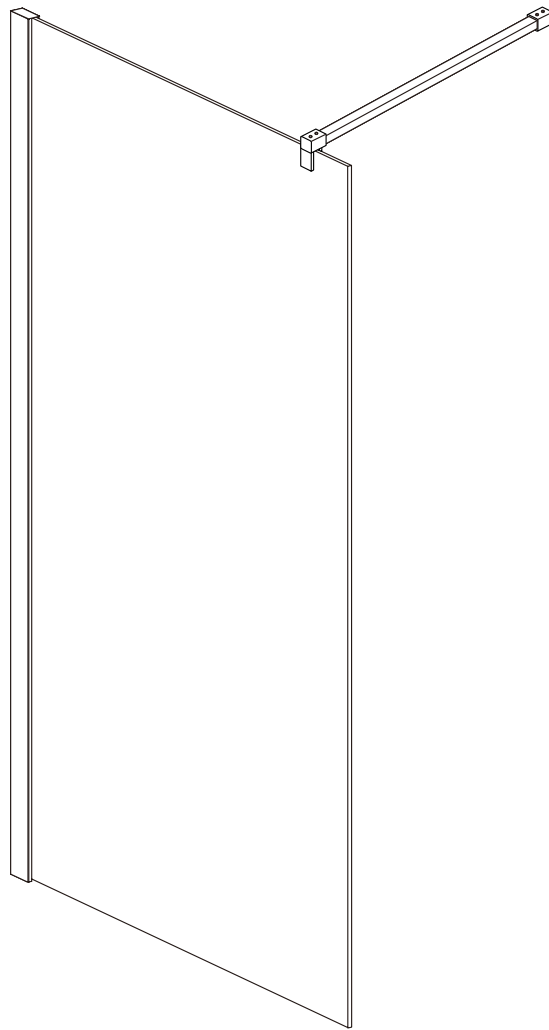

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

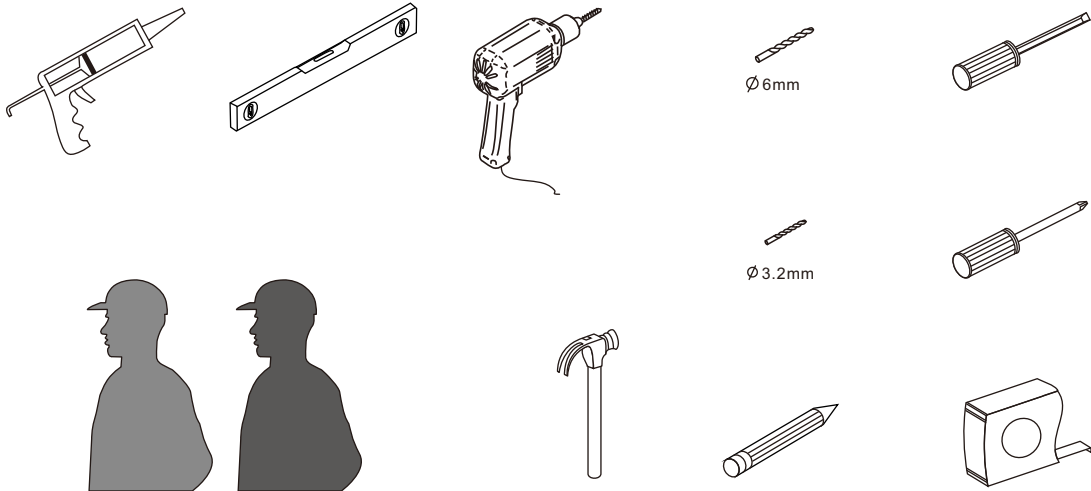






Tools Required




This product is heavy and may require two people to install.



◆ Box Contents

<p>1xInstallation Instruction.</p>	<p>➔</p>	
<p>[1] 4xWall Plugs. [2] 4xScrews ST4x35.</p>	<p>➔</p>	
<p>[3] 4xScrews Cover Caps. [4] 4xScrews ST4x10.</p>	<p>➔</p>	
<p>[5] 1xBracket. [6] 1xCushions. [7] 1xWall Connect . [8] 1xFlat Screw ST4x25 . 1xWall Plug.</p>	<p>➔</p>	
<p>[9] 1xWall Post.</p>	<p>➔</p>	
<p>[10] 2xPost Cover.</p>	<p>➔</p>	
<p>[11] 1xFixed Panel.</p>	<p>➔</p>	

◆ Assembly Drawing




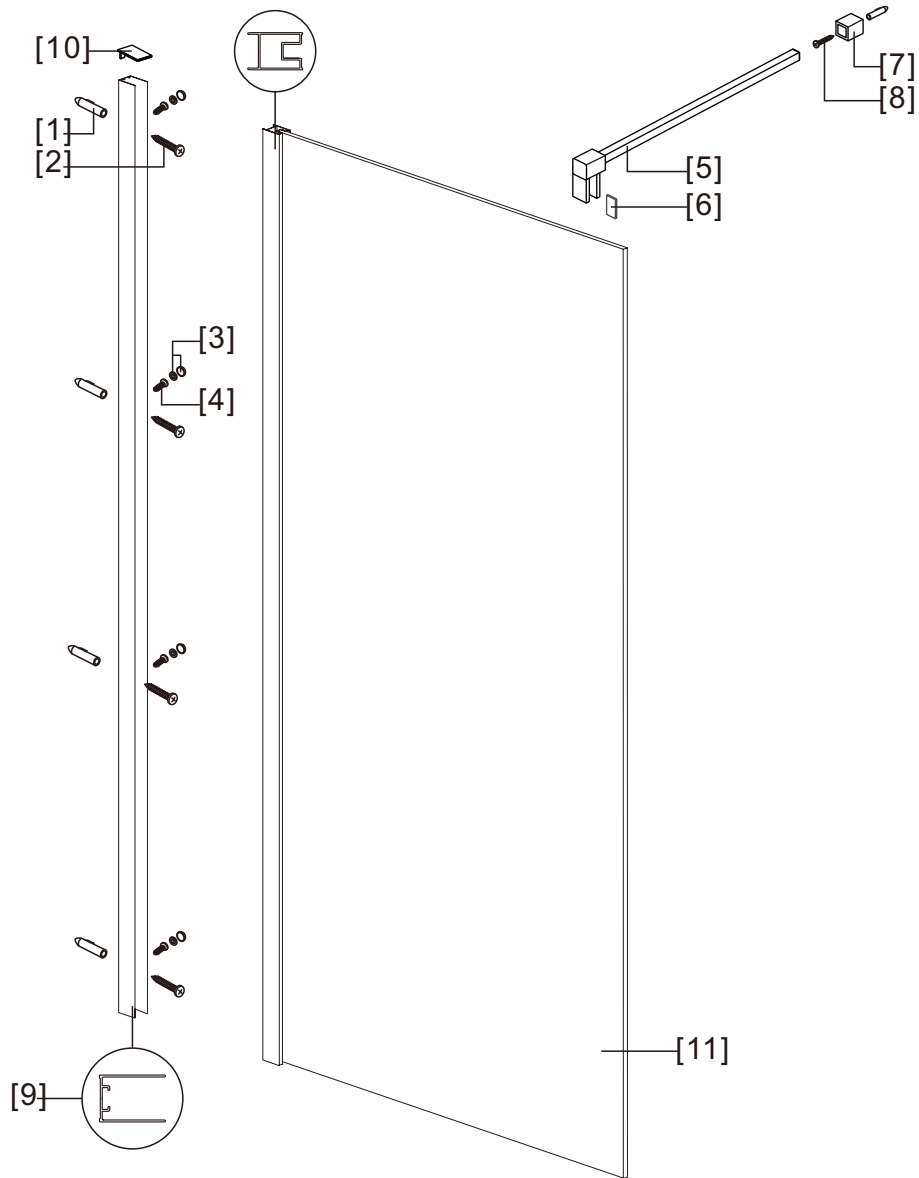


- [1] 5xWall Plugs.
- [2] 4xScrews ST4x35.
- [3] 4xScrews Cover Caps.
- [4] 4xScrews ST4x10.
- [5] 1xBracket.
- [6] 1xCushions.




- [7] 1xWall Connect .
- [8] 1xFlat Screw ST4x25 .
- [9] 1xWall Post.
- [10] 2xPost Cover.
- [11] 1xFixed Panel.

◆ Installation Steps



Step 1

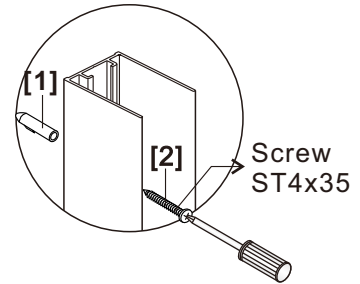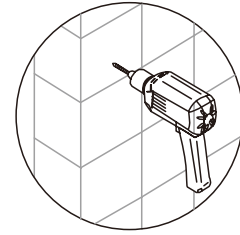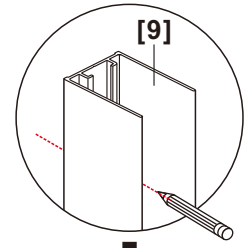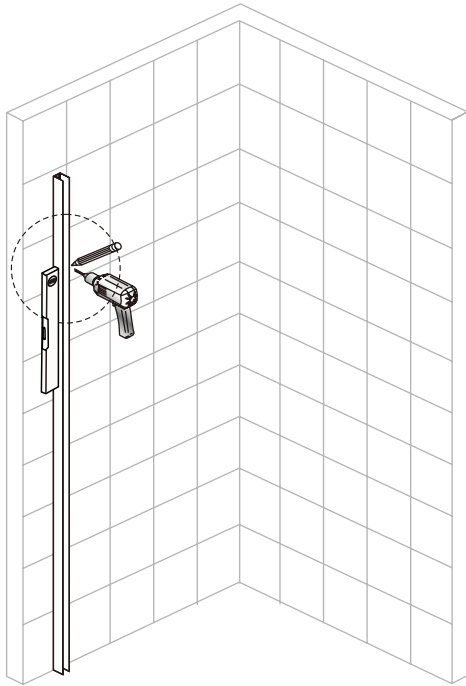



Step 2

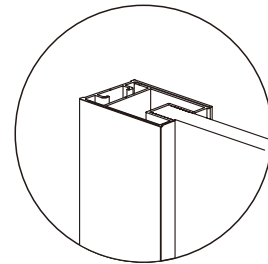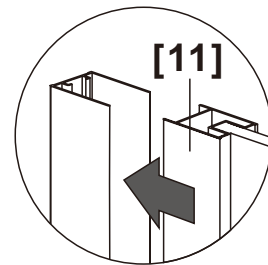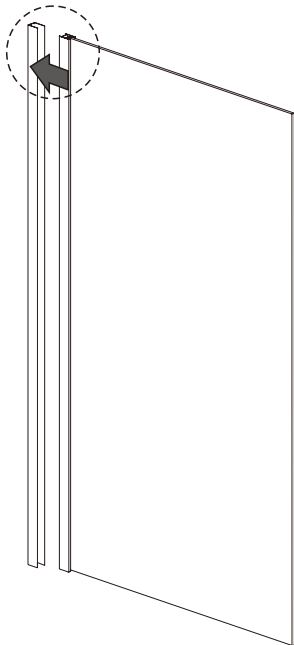

Step 3

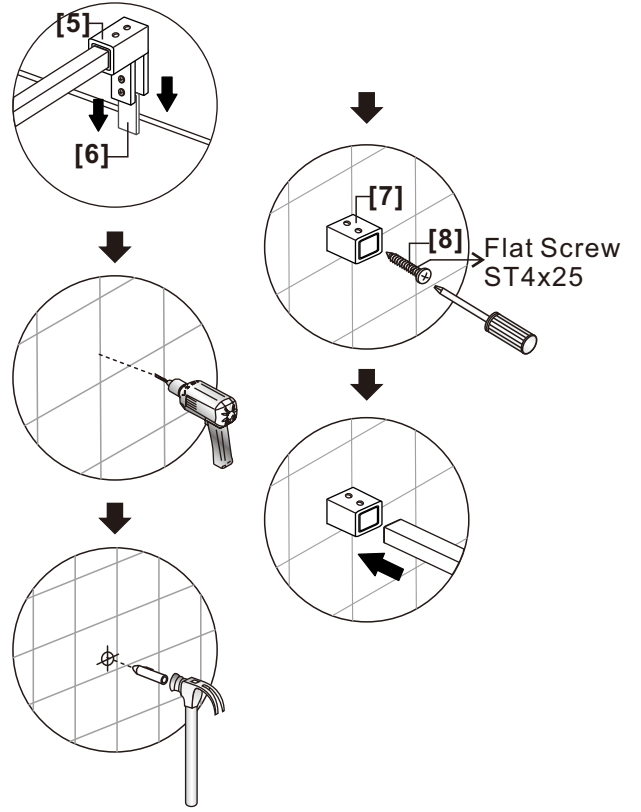
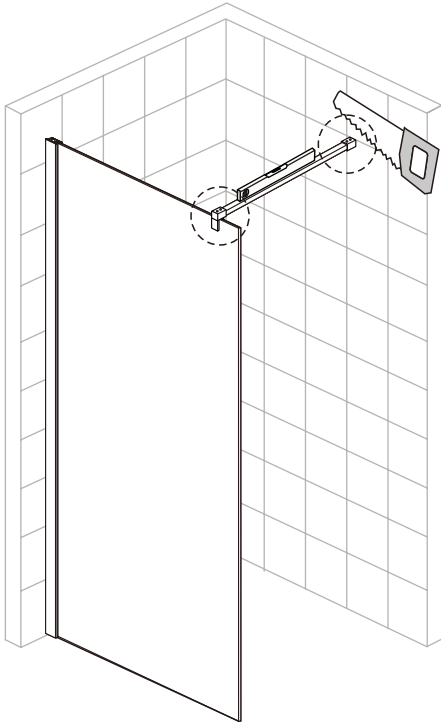


Step 4

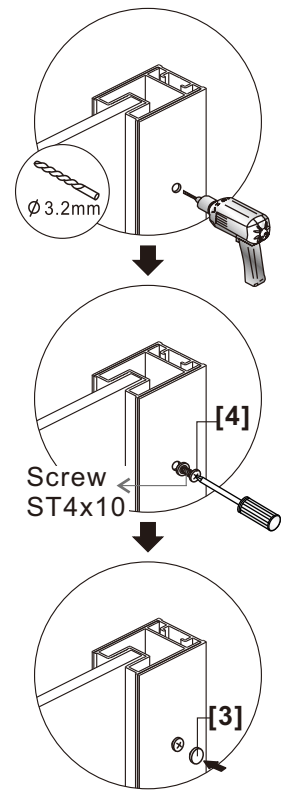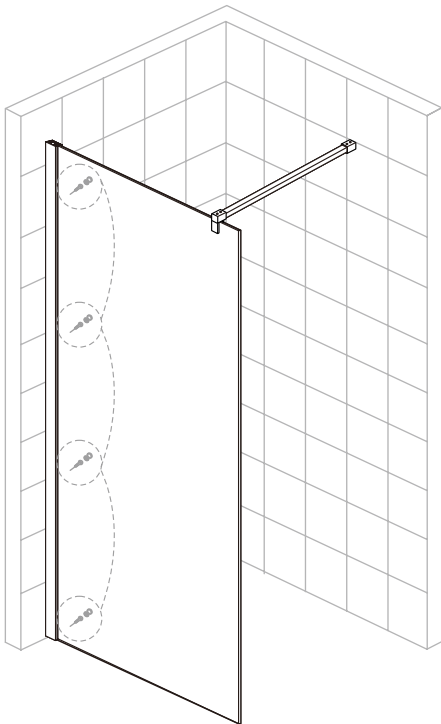

View from inside.

Step 5

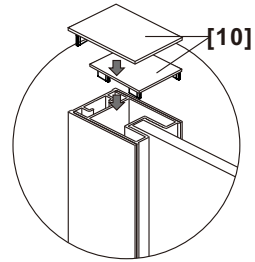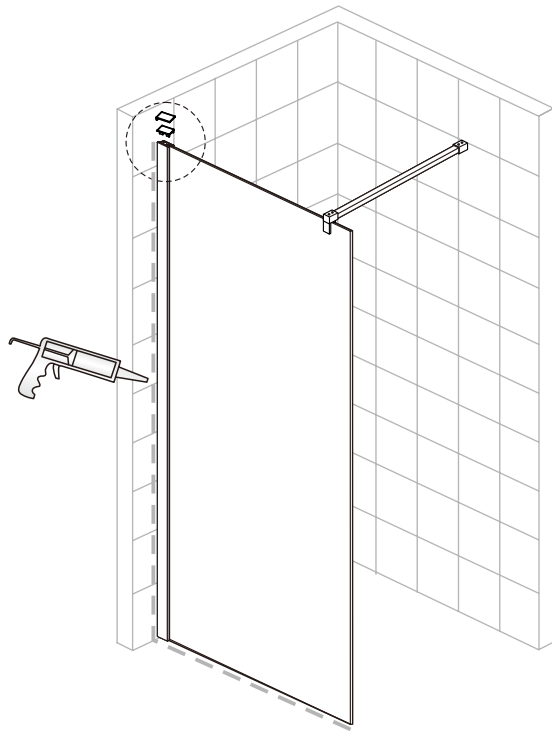

Allow 24 hours for silicone to dry before use.